



38P Condensing Units – 50Hz



38P 18K—24K



38P 30K—60K



Quality Assurance
Certificate Reg. No:
04 100 950420



Subject to change without notice

Manufacturer's Name: Saudi Airconditioning Manufacturing Co. Ltd.

Country of origin: Jeddah, Saudi Arabia

Nearest port of embarkation: Jeddah Islamic port

Product classification: Commercial and Residential

Installation, Operation and Maintenance Instruction

38P – 50Hz

Nominal Cooling Capacity 1.5 – 5.0 Tons

HFC R-410A Refrigerant

The 38P series energy efficient split condensing units incorporate innovative technology to provide reliable cooling performance. Units are pre-wired, pre-charged with Puron® R-410A refrigerant, and tested at the factory. These units can be placed on the side of a building or can be placed on a roof without roof curbs. Each unit is designed to occupy a minimal space. Piping and drain connections are readily accessible.

Contact your local Carrier representative for additional reference materials and information. www.carrier.com

Table of Contents

Safety Considerations.....	2
Physical Data.....	3
Base Unit Dimensions	4
Optional Deflector Accessory	6
Installation/Startup/Service/Maintenance	8
Combination Matrix and Ratings.....	14
Electrical Data.....	14
Typical Wiring Schematic	15
Pressure vs. Temperature Chart R-410A.....	17
Required Liquid Line Temperature	18
Air Conditioner Troubleshooting Chart	19
R-410A Refrigerant Quick Reference Guide	20
Mandatory Startup Checklist and Record.....	21
Residential Piping and Long Line Guideline.....	22

1 – SAFETY CONSIDERATIONS

1.1 – General

Improper installation, adjustment, alteration, service, maintenance or use can cause explosion, fire, electrical shock or other conditions which may cause personal injury or property damage. Consult a qualified installer; service agency must use factory-authorized kits or accessories when modifying this product. Refer to the individual instructions packaged with the kits or accessories when installing.

The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children should be supervised not to play with the appliance.

Follow all the safety codes. Wear safety glasses and work gloves. Use quenching cloths for brazing operations and have a fire extinguisher available. Read these instructions thoroughly and follow all warnings or cautions attached to the unit. Consult local building codes for special requirements. In absence of local codes, it is recommended that the USA standard ANSI/NFPA 70, National Electrical Code (NEC), be followed.

It is important to recognize safety information. This is the safety-alert symbol . When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury.

Understand the signal words DANGER, WARNING, CAUTION, and NOTE. These words are used with the safety-alert symbol. DANGER identifies the most serious hazards which **will** result in severe personal injury or death. WARNING signifies hazards which **could** result in personal injury or death. CAUTION is used to identify unsafe practices, which **may** result in minor personal injury or product and property damage. NOTE is used to highlight suggestions which **will** result in enhanced installation, reliability, or operation.

1.2 – Installation Safety Considerations

After the unit has been received and when it is ready to be installed or reinstalled, it must be inspected for damage. If damage is detected upon receipt, immediately file a claim with the shipping company or repair. This machine must be installed in a location that is not accessible to the public and protected against access by non-authorized people. This machine must not be installed in an explosive atmosphere.

Do not remove the skid or the packaging until the unit is in its final position. The units can also be lifted with slings, using only the designated lifting points marked on the unit (labels on the chassis and a label with all unit handling instructions are attached to the unit). Use slings with the correct capacity, and always follow the lifting instructions on the certified drawings supplied for the unit.

Safety is only guaranteed, if these instructions are carefully followed. If this is not the case, there is a risk of material deterioration and injuries to personnel. These units are not designed to be lifted from above.

1.3 – Warranty

Warranty is based on the general terms and conditions of the manufacturer. Any modifications to the design and/or installation made without discussion with Carrier and without advance written agreement will result in the loss of the right to any warranty claims and any claim for injury to personnel as a result of these modifications.


38P Unit Physical Data

38P Model	18	24	30	36	48	60
Unit Size (Tons)	1.5	2.0	2.5	3.0	4.0	5.0
Operating Weight (kg)	63.0	64.5	89.3	92.0	95.0	105.0
Unit Dimensions (H x W x D)	705 x 918 x 388		945 x 1132 x 449			1045 x 1132 x 449
Unit Color	Grey Enamel Finish					
Maximum Cooling Ambient (F)	125					
Minimum Cooling Ambient (F)	55					
Compressor						
Cool Only	Reciprocating			Scroll		
Metering Device						
Ducted Application	Nozzle in the indoor unit					
High Pressure Switch (Trip/ Reset) - PSIG	630 / 505					
Low Pressure Switch (Trip/ Reset) - PSIG	54 / 117					
Refrigeration System*						
Refrigerant Type	Puron® R-410A					
Initial Charge(kg)	2.16	2.8	3.5	3.17	3.76	4.62
Connection Type	Flare		Flare/Sweat			
Liquid Line	3/8 Inch					
Vapour Line**	5/8 Inch			7/8 Inch		
Max Length	80 ft					
Max Lift	20 ft					
Outdoor Fan						
Motor Type	Permanent Split Capacitor					
RPM - CFM	1100-1800			860 - 3700		
Diameter, No. Blades	18 inch, 3			24 Inch, 3		
Motor Watts	125		200		373	
Condenser Coil						
Standard Coil Material (Pipes/Fins)	Cu/Al					
Coil test Pressure (PSIG)	400-450					


* For Long line application refer to Long Line Guide Line (Single Stage Only) - Available in the Installation, Operation & Maintenance manual.

** Sweat adapter kit is provided for 7/8" tube size.


Base Unit Dimensions – 38P Series Size 18-24

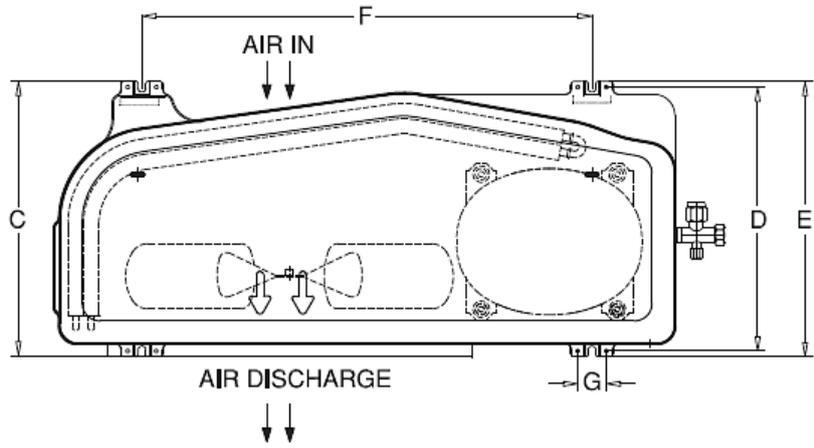

Top View

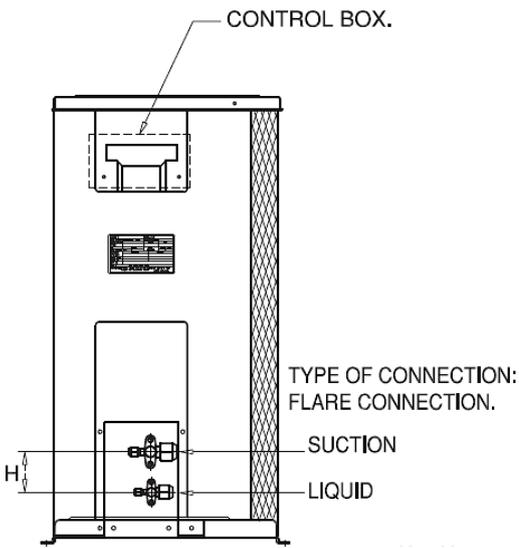

Side View

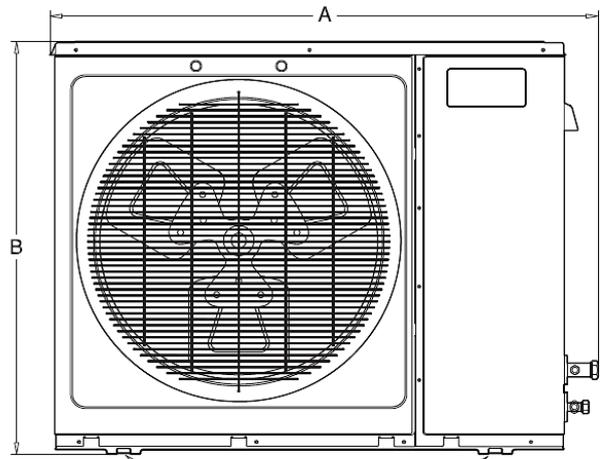

Front View


Dimensions for Unit Model Size 18 - 24

A		B		C		D		E		F		G		H	
in.	mm	in.	mm	in.	mm										
36.14	918	27.76	705	15.24	387	14.65	372	15.28	388	24.80	630	1.57	40	2.49	63.2


Notes:

1. Free distance around the unit from the wall.
 - a. Front: 59 in. (1500 mm) min.
 - b. Rear & Sides: 20 in. (500 mm) min.
2. Size of wire: 12 AWG
3. * Weights given are approximate for each unit.


Base Unit Dimensions – 38P Series Size 30-60

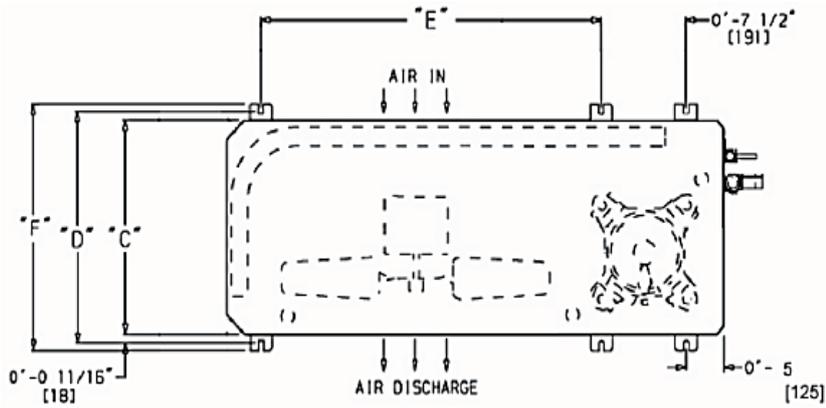

Top View

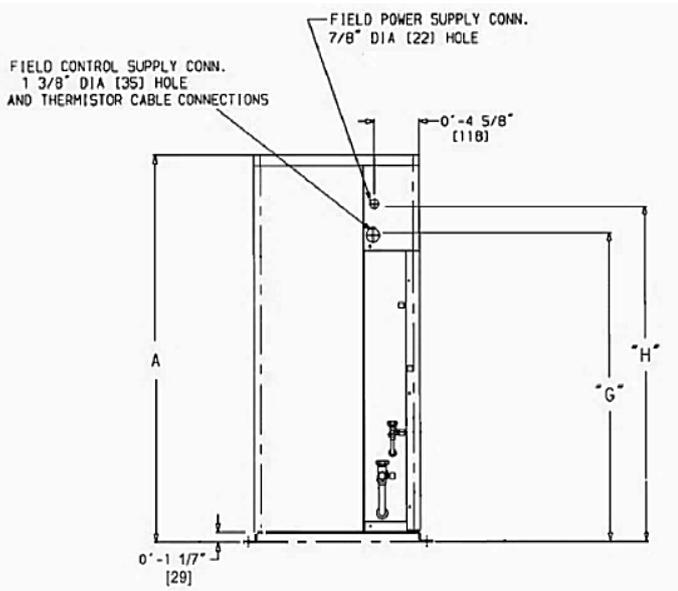

Side View

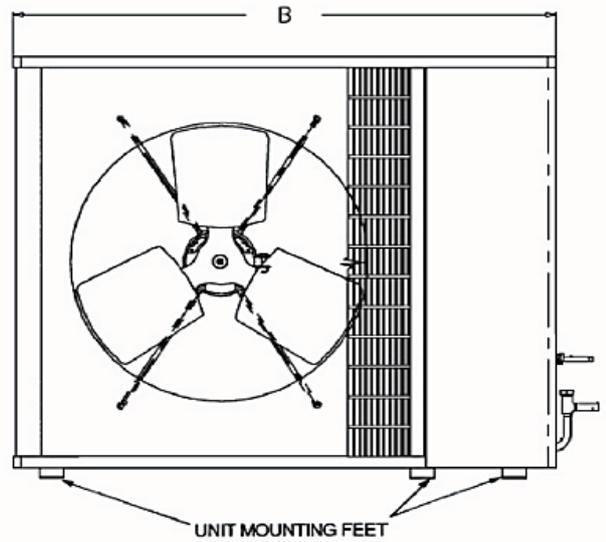

Front View


Dimensions

A		B		C		D		E		F		G		H	
in.	mm	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm
Unit Model Size 30 - 48															
37.19	945	44.56	1132	17.46	444	18.44	468.3	30.49	774.4	19.63	498.5	19.63	498.5	29.63	752.5
Unit Model Size 60															
41.13	1045	44.56	1132	17.46	444	18.44	468.3	30.49	774.4	19.63	498.5	23.56	598.5	33.56	852.5

Notes:



1. Free distance around the unit from the wall.
 - a. Front: 59 in. (1500 mm) min.
 - b. Rear & Sides: 20 in. (500 mm) min.
2. Size of wire: 12 AWG
3. * Weights given are approximate for each unit.

Optional Deflector Accessory – 38P Series Size 18-24

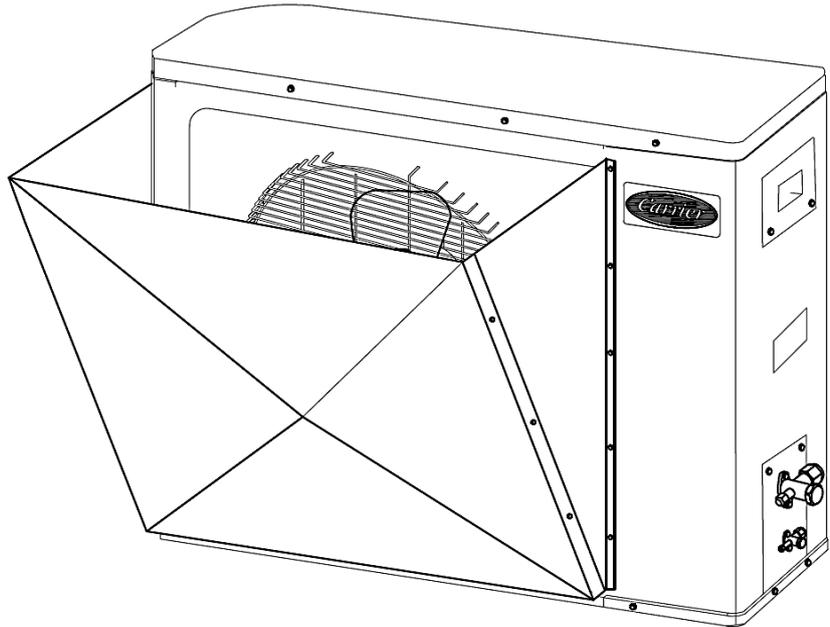

SIDE VIEW

TOP VIEW

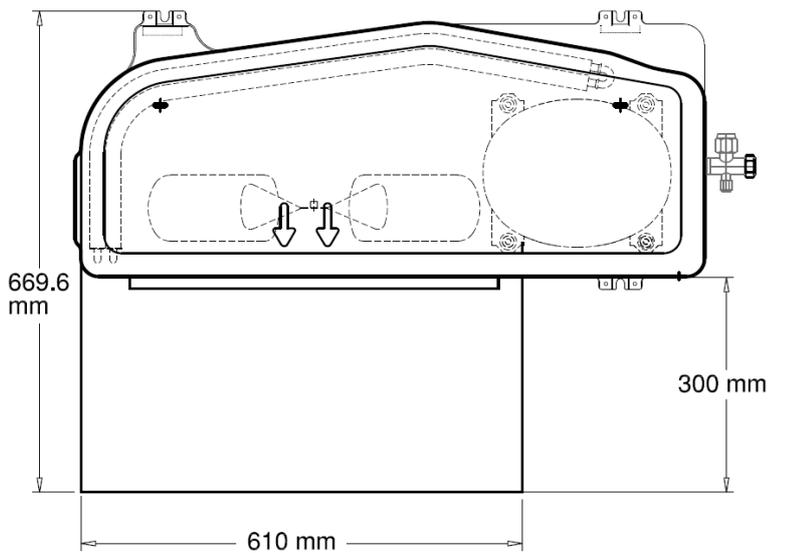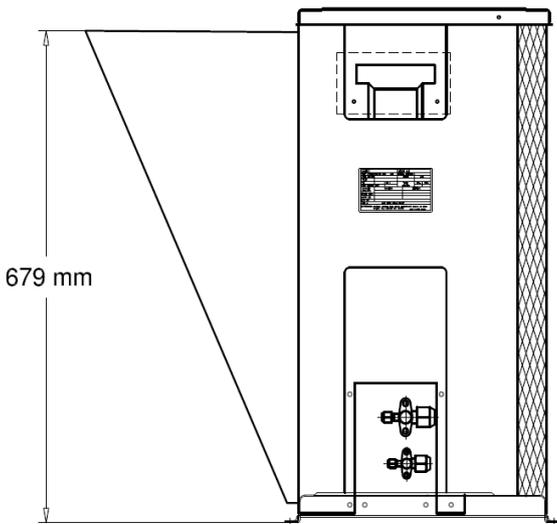


The air deflector accessory converts the direction of air flow in the side discharge outdoor condensing units from horizontal direction to vertical direction to make the unit more flexible and suitable for top discharge applications.

The air deflector accessory consists of three pieces of painted galvanized sheet metal parts assembled at site.



Note: This accessory is only available for 38P Size 18-24.

Optional Deflector Accessory – 38P Series Size 30-60

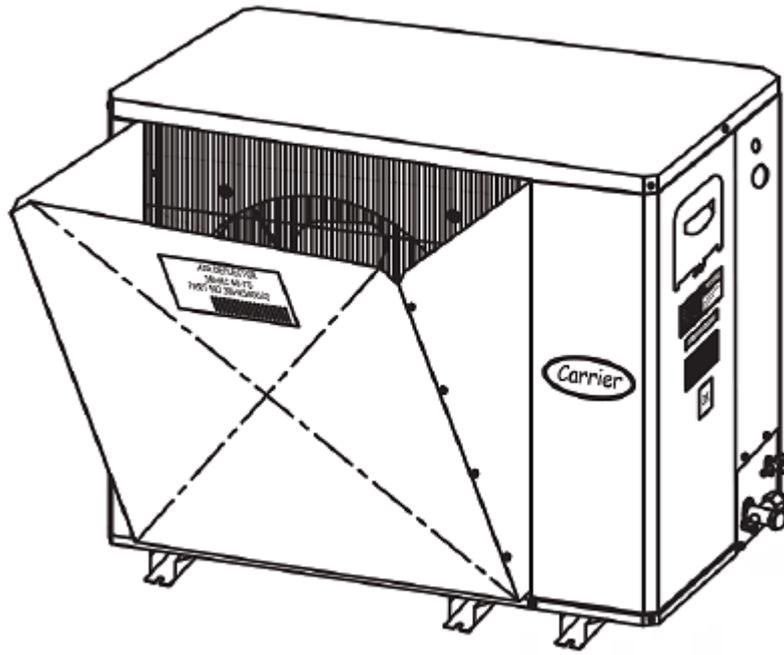

SIDE VIEW

TOP VIEW

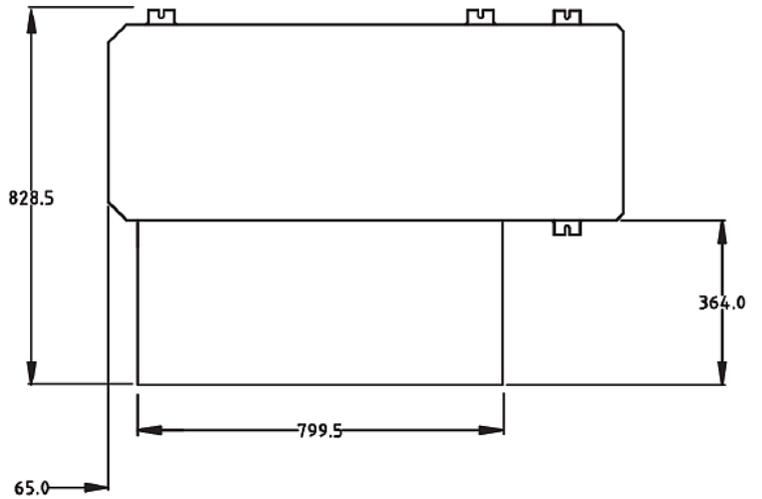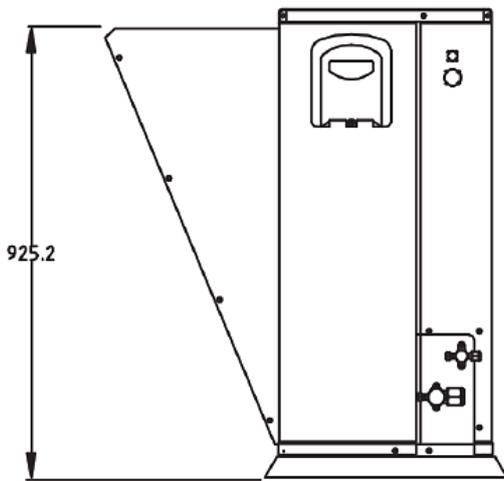

The air deflector accessory converts the direction of air flow in the side discharge outdoor condensing units from horizontal direction to vertical direction to make the unit more flexible and suitable for top discharge applications.

The air deflector accessory consists of three pieces of painted galvanized sheet metal parts assembled at site.

Note: This accessory is only available for 38P Size 30-60.

INSTALLATION

Step 1 — Complete Pre-Installation Checks

Unpack Unit—Move unit to final location. Remove carton from unit, being careful not to damage service valves or grilles.

Inspect Shipment — File claim with shipping company if shipment is damaged or incomplete. Check unit nameplate to ensure unit matches job requirements. **CONSIDER SYSTEM REQUIREMENTS** — Consult local building codes and NEC for special installation requirements. Allow sufficient space for airflow clearance, wiring, refrigerant piping, and servicing unit. See Unit Dimensional Drawing. Unit can be mounted on a level pad directly on base legs or mounted on raised pads at support points.



Warning

Before Installing or servicing system, always turn off main power to system.

Step 2 — Rig and Mount Unit

Mounting on Ground — Mount unit on a solid, level concrete pad. Position unit so water from roof does not fall directly into unit. Accessory stacking kits can be used when units are to be stacked. If conditions or local codes require unit to be fastened to a pad, 6 field-supplied tie down bolts should be used and fastened through slots provided in unit mounting feet. See Fig. 3.

Mounting on Wall — See Fig. 2 for wall mounting.

Mounting on Roof — Mount unit on level platform or frame at least 6 in. On roof surface, isolate unit and tubing from structure.

Rigging— Keep unit upright. Lift unit using sling. Use cardboard or padding under sling, and spreader bars to prevent sling damage to unit. See Fig. Install unit so coil does not face into prevailing winds, all panels must be in place when rigging.

Mounting Position — The unit should be installed outdoors in a place where air will not be stagnant. In case of installing more than one unit, units should be arranged in a way that no exhausted air will be sucked in as an intake for another unit. Enough space should be kept around the unit for air flow clearance, wiring, refrigerant piping and servicing. The unit should not be installed near to any source of heat, steam or any flammable gas.

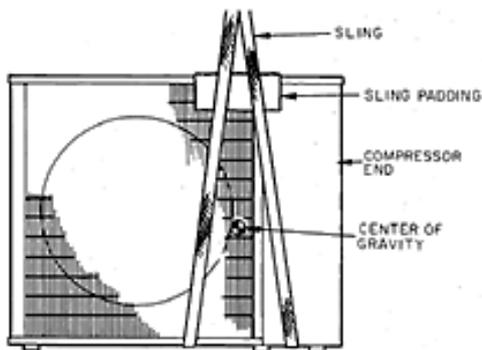


Fig – 1 Lifting unit with sling.

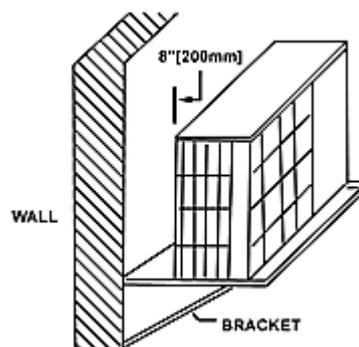


Fig – 2 Wall Mounting

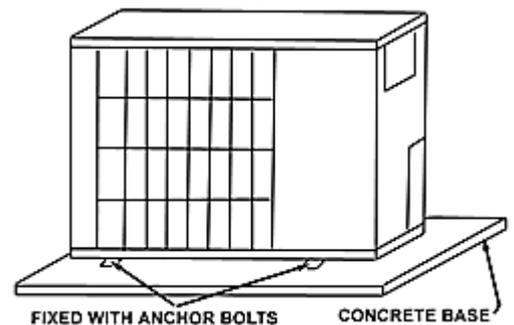


Fig – 3 Ground Mounting

Step 3—Complete Refrigerant Piping Connections



Caution

R-410A systems operate at higher pressures than standard R-22 systems. Do not use R-22 service equipment or components on R-410A equipment. No other refrigerant may be used in this system. Gage set, hoses, and recovery system must be designed to handle R-410A. If you are unsure consult the equipment manufacturer.

Outdoor units may be connected to indoor units using field-supplied tubing of refrigerant grade and condition. Do not use less than 10 ft. of interconnecting tubing. When more than 50 ft. of interconnecting tubing and more than 30 ft. of vertical lift is used, refer to Long Line Guideline Section.

Warning

Do not bury more than 36 in. of refrigerant pipe in the ground. If any section of pipe is buried, there must be a 6 in. vertical rise to the valve connections on the outdoor unit. If more than the recommended length is buried, refrigerant may migrate to the cooler, buried section during extended periods of system shutdown. This causes refrigerant slugging and could damage compressor at start-up.

If either refrigerant tubing or indoor coil is exposed to atmospheric conditions for longer than 5 minutes, it must be evacuated to 1000 microns to eliminate contamination and moisture in the system.

Run refrigerant tubes as directly as possible, avoiding unnecessary turns and bends. Suspend refrigerant tubes so they do not damage insulation on vapor tube and do not transmit vibration to the structure. Also, when passing refrigerant tubes through the wall, seal opening so that vibration is not transmitted to structure. Leave some slack in refrigerant tubes between structure and outdoor unit to absorb vibration. Refer to separate indoor unit installation instructions for additional information.

Make Piping Sweat Connections — Remove plastic caps from liquid and suction service valves. Use refrigerant grade tubing. Service valves are closed from the factory and ready for brazing. After wrapping the service valve with a wet cloth, the tubing set can be brazed to the service valve using either silver bearing or non-silver bearing brazing material. Consult local code requirements. Refrigerant tubing and indoor coil are ready for leak testing. NOTE: Unit is shipped with R-410A Holding factory charge indicated on nameplate. Pass nitrogen or other inert gas through piping while brazing to prevent formation of copper oxide.

Caution

To avoid damage while brazing, service valves should be wrapped in a heat sinking material such as a wet cloth. When Brazing tubing sets to service valves, a brazing shield must be used to prevent damage to the painted unit surface.

Provide Safety Relief — A fusible plug is located in unit suction line; do not cap this plug. If local code requires additional safety devices, install as directed.

Step 4 — Make Electrical Connections

Warning

Unit cabinet must have an uninterrupted, unbroken electrical ground to minimize the possibility of personal injury if an electrical fault should occur. This ground may consist of electrical wire connected to the unit ground lug in control compartment, or conduit approved for electrical ground when installed in accordance with NEC, ANSI/NFPA 70 (American National Standards Institute/National Fire Protection Association), and local electrical codes. Failure to follow this warning could result in the installer being liable for personal injury to others.

Caution

Unit failure as a result of operation on improper line voltage or excessive phase imbalance constitutes abuse and may cause damage to electrical components. Such operation will invalidate any applicable Carrier warranty.

Power Wiring — Unit is factory-wired for voltage shown on nameplate. Provide adequate, fused disconnect switch within sight of unit, readily accessible but out of reach of children. Provision for locking the switch open (off) is advisable to prevent power from being turned on while unit is being serviced. Disconnect switch, fuses, and field wiring must be in compliance with NEC and applicable local codes. Use minimum 60 C wires for field power connection. Route power wires through opening in the unit side panel and connect in unit control box. Unit must be grounded

Control Circuit Wiring — See Electrical Data Table and unit label diagram for field-supplied wiring details. Route control circuit wire through the opening to unit side panel connection and unit control box.

NOTE: Operation of unit on improper line voltage constitutes abuse and could affect Carrier warranty. See Electrical Data Table.

Do not install unit in system where voltage may fluctuate above or below permissible limits. When making electrical connections, provide clearance at unit for refrigerant piping connections.

Connections to Duct-Free Fan Coil Units — The 38P units are designed for easy match-up, check the applicable wiring diagrams.

Warning

Before performing service or maintenance, be sure the indoor unit main power switch is off and indoor blower has completely stopped. Failure to do so may result in electrical shock or injury from rotating fan blades.

START-UP

Preliminary Checks

1. Check that all the internal wiring connections are tight and that barriers, covers and panels are in place.
2. Make certain field electrical power source agrees with unit nameplate and rating.
3. Open all service valves.

Leak Test— Field piping and fan coil must be leak tested by pressure method described in Carrier Standard Service Techniques Manual, Chapter 1, Section 1-6.

Evacuate and Dehydrate— Field piping and fan coil must be evacuated and dehydrated by either of the methods described in Carrier Standard Service Techniques Manual, Chapter 1, Section 1-7.

Charge System — Release factory charge into system by opening (back seating) liquid and suction line service valves. Add charge amount as required for the total system. Refer to separate indoor unit installation instructions for the required total system charge when connected to the indoor unit.

Percentage decrease in capacity due to Maximum Line Lengths, Please refer to Long Line Guideline.

To Start Unit

NOTE: Please use the Pre-startup and Startup included with the fan coil units for correct start-up procedures. Be sure that field disconnect is closed. Set room thermostat below ambient temperature. Operate unit for 15 minutes, then check system refrigerant charge. Unit compressor starts after a 5-minute delay if equipped with accessory Time Guard II device.

SERVICE

Warning

Before performing service or maintenance, be sure the indoor unit main power switch is off and indoor blower has completely stopped. Failure to do so may result in electrical shock or injury from rotating fan blades.

Caution

Do not leave system open to atmosphere. Product damage could occur. Compressor oil is highly susceptible to moisture absorption.

Caution

The compressor used in this product is specifically designed to operate with R-410A refrigerant and cannot be interchanged.

Outdoor Fan— A reinforced wire mount holds the outdoor fan assembly in place.

Compressor Pressure Relief Valve — Valve is located in compressor. Relief valve opens at a pressure differential of approximately 450 ± 50 psig between suction (low side) and discharge (high side) to allow pressure equalization.

Internal Current and Temperature Sensitive Overload — Control resets automatically when internal compressor motor temperature drops to a safe level (overloads may require up to 45 minutes to reset). When an internal overload is suspected of being open, check by using an ohmmeter or continuity tester. If necessary, refer to Carrier Standard Systems Techniques Manual, Chapter 2, for complete information.

Pump down Procedure — Service valves provide a convenient shut-off valve useful for certain refrigeration system repairs. System may be pumped down to make repairs on low side without losing complete refrigerant charge.

1. Attach pressure gage to suction service valve gage port.
2. Front seat the liquid line valve.
3. Start unit in cooling mode. Run until low-pressure switch opens at 54 psig (472Kpa). Do not allow compressor to pump to a vacuum.
4. Shut unit off and front seat suction valve.
5. Depressurize low side of unit and recover refrigerant following accepted practice.

Filter Drier – The filter drier is specifically designed to operate with R-410A, use only factory-authorized components. When removing a filter drier, use a tubing cutter to cut drier from system. **Do not unsweat a filter drier** from system. Heat from unsweating will release moisture and contaminants from drier into the system.



Caution

The 38P unit coils hold only the factory- designated amount of refrigerant. Additional refrigerant may cause units to relieve pressure through compressor internal pressure relief valve (indicated by sudden rise of suction pressure) before suction pressure reaches 5 psig. If this occurs, shut off unit immediately, then front seat the suction valve and remove and recover excess refrigerant following accepted practice.

Loss of Charge Pressure Switch — This switch, mounted on the suction line, has fixed non-adjustable settings. To check pressure switch, attach pressure gage to suction service valve gage port. Slowly close liquid shutoff valve and allow compressor to pump down. Do not allow compressor to pump down below 2 psig. Compressor should shut down when suction pressure drops to cutout pressure in Physical Data Table, and should restart when pressure builds up to cut-in pressure shown in Physical Data Table.

High Pressure Switch — This switch, mounted on the discharge line, has fixed non- adjustable settings & auto reset. To check pressure switch, attach pressure gauge to compressor discharge service port, block condenser coil, monitor pressure till compressor trips, remove blockage and observe at which pressure compressor restarts.



Caution

If the compressor does not trip at the cut-out pressure (630 psig), remove the blockage immediately and contact your local Carrier service center.

Service Valves — The service valves in the outdoor unit come from the factory front seated. This means the refrigerant charge is isolated from the line-set connection ports. To prevent damage to the valve, use a wet cloth or other acceptable heat sink material on the valve before brazing. The service valves must be back seated (turned counterclockwise until seated) before the service port caps can be removed and the hoses of the gage manifold connected. In this position, refrigerant has access from the through outdoor and indoor unit. The service valve cannot be field repaired; only a complete valve or valve stem seal and service port caps are available for replacement.

MAINTENANCE



Caution

The compressor in this system uses a polyol ester (POE) oil Mobil EAL ARTIC 22CC. This oil is extremely hygroscopic, meaning it absorbs water readily. POE oils can absorb 15 times as much water as other oils designed for HCFC and CFC refrigerants. Take all necessary precautions to avoid exposure of the oil to the atmosphere.



Warning

Before performing service or maintenance, be sure the indoor unit main power switch is off and indoor blower has completely stopped. Failure to do so may result in electrical shock or injury from rotating fan blades.

Lubrication Compressor — Compressor contains factory oil charges; replace oil when lost. See Table 1 for oil recharge and refer to Carrier Standard Service Techniques Manual, Chapter 1, pages 1 to 21 for oil recharging procedure.

Cleaning Coils — Coil should be washed out with water or blown out with compressed air. Note that the blow-thru design causes dirt and debris to build up on the inside of the coils. Clean coil annually or as required by location and outdoor air conditions. Inspect coil monthly and clean as required. Fins are NOT continuous through coil sections. Dirt and debris may pass through the first section, become trapped between the rows of fins, and restrict condenser airflow. Use a flashlight to determine if dirt or debris has collected between coil sections.

Clean coil as follows:

1. Turn off unit power.
2. Use a garden hose or other suitable equipment to flush coil from the outside to remove dirt. Be sure to flush all dirt and debris from drain holes in the base of unit. Fan motors are waterproof.



Warning

Do not use harsh chemicals to clean the coils, use only water, compressed air or Carrier approved coil

Leak Detection — New installations should be checked for leaks prior to complete charging. If a system has lost all or most of its charge, system must be pressurized again to approximately 150 lb minimum. This can be done by adding refrigerant using normal charging procedures or by pressurizing system with nitrogen (less expensive than refrigerant). Nitrogen also leaks faster than R-410A. Nitrogen cannot, however, be detected by an electronic leak detector.



Warning

Due to the high pressure of nitrogen, it should never be used without a pressure regulator on the tank. Failure to follow this warning can cause a fire, personal injury, or death.

Assuming that a system is pressurized with either all refrigerant or a mixture of nitrogen and refrigerant, leaks in the system can be found with an electronic leak detector that is capable of detecting HFC refrigerant. If system has been operating for some time, make first check for a leak visually. Since refrigerant carries a small quantity of oil, traces of oil at any joint or connection is an indication that refrigerant is leaking at that point. A simple and inexpensive method of testing for leaks is to use soap bubbles. Any solution of water and soap may be used. Soap solution is applied to all joints and connections in system. A small pinhole leak is located by tracing bubbles in soap solution around leak. If the leak is very small, several minutes may pass before a bubble will form.

R-410A Refrigerant Charging — Refer to unit information plate for superheat charging procedure. **R-410A refrigerant cylinders contain a dip tube which allows liquid refrigerant to flow from cylinder in upright position.** Charge R-410A units with cylinder in upright position and a commercial type metering device in the

manifold hose. Charge refrigerant into suction-line. For all approved combinations, system must be charged correctly for normal system operation and reliable operation of components. If system has lost all charge, weigh in charge using dial-a-charge designed for R-410A refrigerant or digital scale. System charge should be fine-tuned by using superheat method.

Combination Matrix and Ratings

Unit Size	Outdoor Model	Indoor Model	Indoor Type	Capacity (Btu/hr)		EER (Btu/hr) / W		Power Input (kW)		AMPS	
				AHRI	T3	AHRI	T3	AHRI	T3	AHRI	T3
18	38PKC18DS70-09	FB4PSSF018000E	Ducted	18000	14500	11.60	8.20	1.552	1.768	7.20	8.00
		42TPM018-71ECRE		18500	16000	11.60	8.50	1.595	1.882	7.50	8.60
24	38PKC24DS70-09	FB4PSSF024000E	Ducted	24000	18500	11.60	8.30	2.069	2.229	9.30	10.50
		42TPM024-71ECRE		24500	21000	11.60	8.80	2.112	2.386	9.30	10.50
30	38PKS30DS70-01	FB4PSSF030000E	Ducted	29500	24000	11.71	8.42	2.520	2.850	11.50	13.50
		42TPM030-71ECRE		33000	27000	12.94	8.71	2.550	3.100	11.00	13.80
36	38PKS36DS90-01	FB4PSSF036000E	Ducted	35000	29000	11.95	8.65	2.930	3.350	5.50	6.30
		42TPM036-71ECRE		37000	33000	11.82	8.80	3.136	3.750	5.30	5.60
48	38PKS48DS90-01	FB4PSSF048000E	Ducted	49000	45000	11.81	8.60	4.150	5.230	7.00	8.70
		42TPM048-71ECRE		52000	46000	13.00	9.30	4.000	4.946	6.70	7.80
60	38PKS60DS90-01	FB4PSSF060000E	Ducted	56000	49500	12.10	8.65	4.630	5.720	7.80	9.50
		42TPM060-71ECRE		63000	55000	13.00	9.50	4.846	5.789	8.20	9.50

Legend and Notes for Combination Matrix and Ratings

CFM — Cubic Feet per Minute

EER — Energy Efficiency Ratio

AHRI — Air-Conditioning, Heating, and Refrigerant Institute

Notes: Testing as per AHRI testing standard and T3 testing standard

Electrical Data

Size	Outdoor Model	Power Supply (V/Ph/Hz)	Voltage		Compressor		FAN	MCA	MOCP
			Min	Max	RLA	LRA	FLA		
18	38PKC18DS70-09	230/1/50	207	253	6.2	48	1.00	8.8	15
24	38PKC24DS70-09	230/1/50	207	253	8.6	48	1.00	11.8	20
30	38PKS30DS70-01	230/1/50	207	253	13.5	67.0	1.60	18.5	30
36	38PKS36DS90-01	400/3/50	360	440	6.6	46.0	1.60	9.9	15
48	38PKS48DS90-01	400/3/50	360	440	7.6	51.5	2.25	11.8	15
60	38PKS60DS90-01	400/3/50	360	440	9.5	67.1	2.25	14.1	20

Legend and Notes for Electrical Data Table

RLA — Rated Load Amps

LRA — Locked Rotor Amps


FLA — Full Load Amps

MCA — Minimum Circuit Amps

MOCP — Maximum Overcurrent Protection

Typical Wiring Schematic – 38P Series

38PKC18 & 38PKC24 (230 – 1Ph – 50Hz) – Ducted

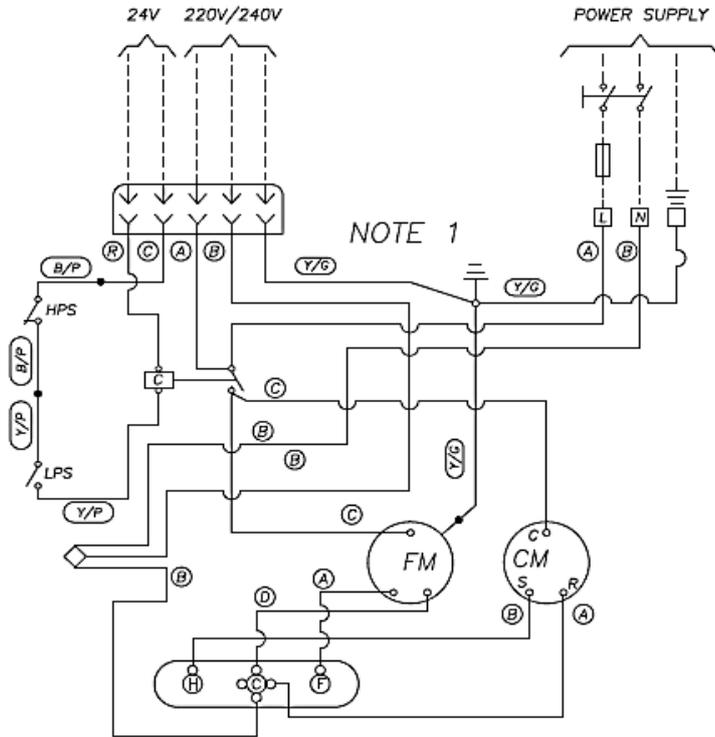

NOTE 1

NOTE 1 THE CONNECTION SEQUENCE DOESN'T REPRESENT THE PHYSICAL LAYOUT


LEGEND

- FACTORY WIRING
- WIRING BY OTHERS
- ⊗ CONNECTOR
- TERMINAL ON COMPONENTS
- JUNCTION
- TERMINAL ON STRIP
- ⌞ N.O.CONTACT
- ⌞ N.C.CONTACT
- (H) (C) (F) CAPACITOR (COMP. & FAN MOTOR)
- ⊞ COIL
- ⊞ FUSE
- ⌞ RESISTOR
- C COMPRESSOR CONTACTOR
- CM COMPRESSOR MOTOR
- FM FAN MOTOR EXTERNAL UNIT
- HPS HIGH PRESSURE SWITCH
- LPS LOW PRESSURE SWITCH
- ◇ CONTACTOR DUMMY TERMINAL

WIRE COLOURS:

- (B/P) BLUE/PINK
- (Y/P) YELLOW/PINK
- (A) BROWN
- (Y/G) YELLOW/GREEN
- (B) BLUE
- (C) BLACK
- (D) YELLOW
- (R) RED

38PKC30 (230 – 1Ph – 50Hz) – Ducted

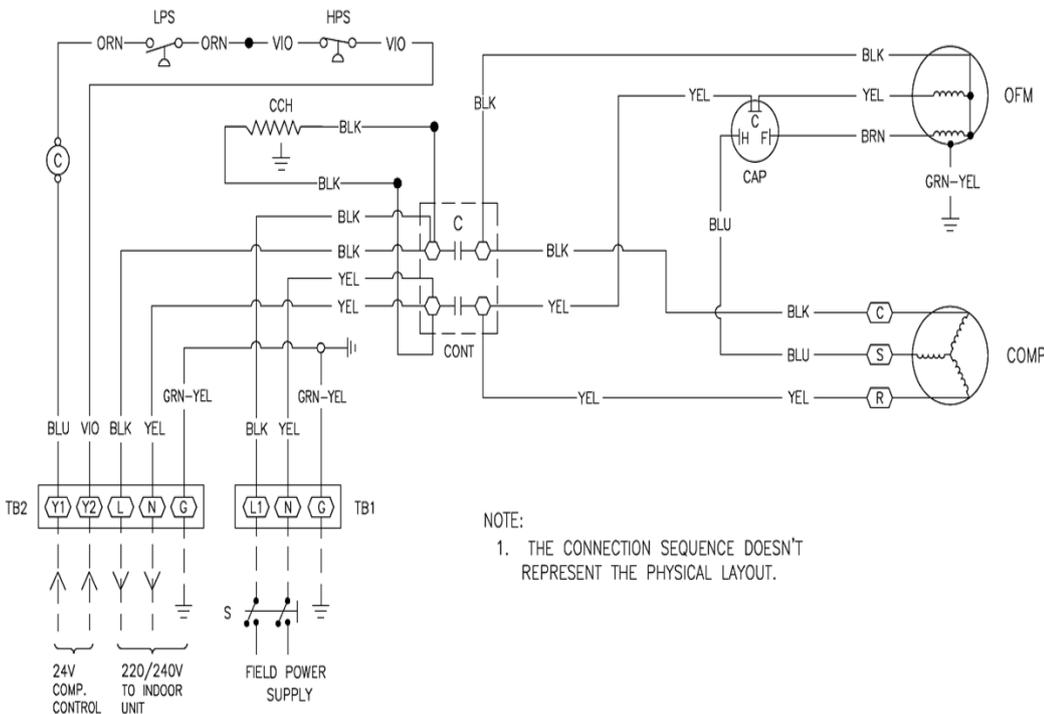


NOTE:
1. THE CONNECTION SEQUENCE DOESN'T REPRESENT THE PHYSICAL LAYOUT.

LEGEND :

- SPLICE
- FACTORY WIRING
- OPTIONAL WIRING
- FIELD WIRING
- (X) TERMINAL (MARKED)
- [X] TERMINAL BLOCK
- ⊞ GROUND
- ⊞ CONTACTOR COIL
- CCH CRANK CASE HEATER
- CONT CONTACTOR
- C CONTACTOR CONTACT
- CAP CAPACITOR
- COMP COMPRESSOR
- OFM OUTDOOR FAN MOTOR
- HPS HIGH PRESSURE SWITCH
- LPS LOW PRESSURE SWITCH
- TB1&2 TERMINAL BLOCKS
- S MAIN SWITCH

Typical Wiring Schematic – 38P Series (Continued)

38PKS36/48/60 (400 – 3Ph – 50Hz) – Ducted

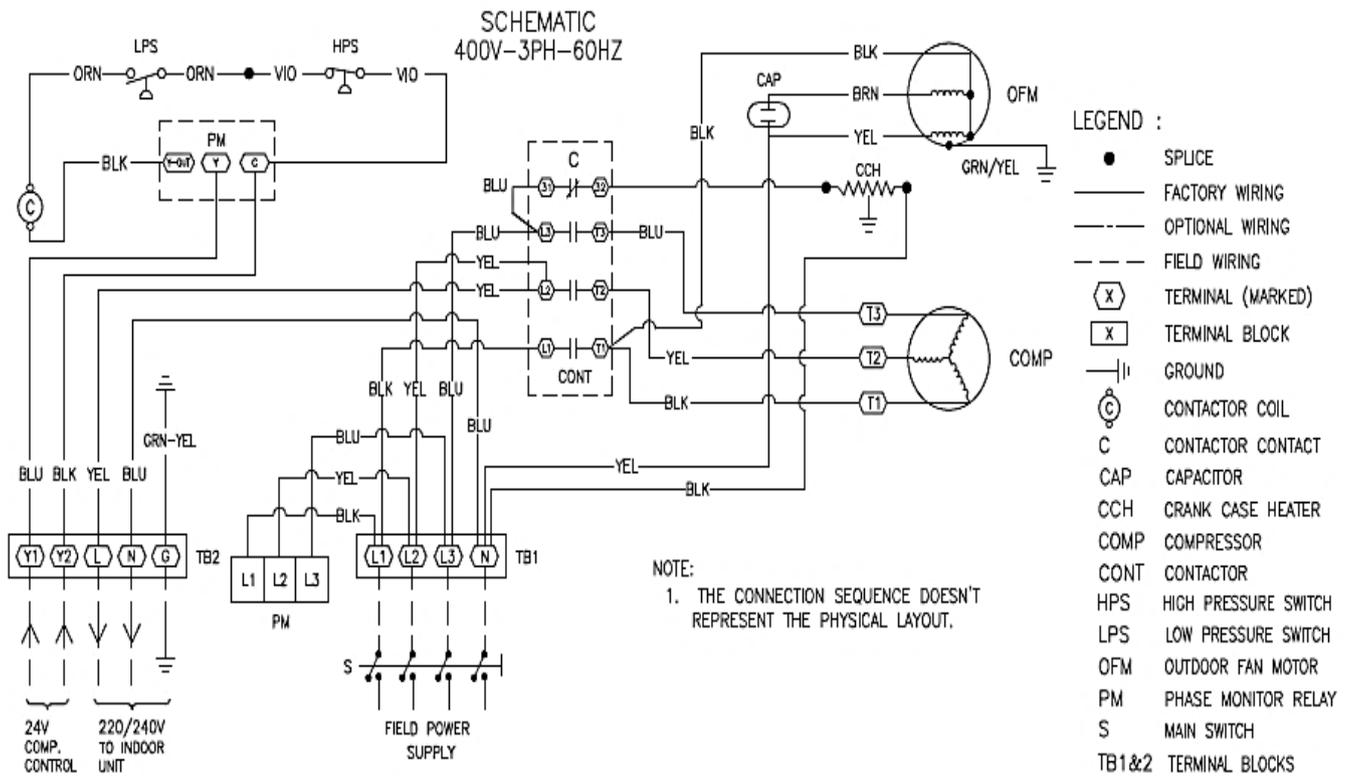

Pressure vs. Temperature Chart R-410A

PSIG	°F	PSIG	°F	PSIG	°F	PSIG	°F	PSIG	°F	PSIG	°F
12	-37.7	114	37.8	216	74.3	318	100.2	420	120.7	522	137.6
14	-34.7	116	38.7	218	74.9	320	100.7	422	121.0	524	137.9
16	-32.0	118	39.5	220	75.5	322	101.1	424	121.4	526	138.3
18	-29.4	120	40.5	222	76.1	324	101.6	426	121.7	528	138.6
20	-36.9	122	41.3	224	76.7	326	102.0	428	122.1	530	138.9
22	-24.5	124	42.2	226	77.2	328	102.4	430	122.5	532	139.2
24	-22.2	126	43.0	228	77.8	330	102.9	432	122.8	534	139.5
26	-20.0	128	43.8	230	78.4	332	103.3	434	123.2	536	139.8
28	-17.9	130	44.7	232	78.9	334	103.7	436	123.5	538	140.1
30	-15.8	132	45.5	234	79.5	336	104.2	438	123.9	540	140.4
32	-13.8	134	46.3	236	80.0	338	104.6	440	124.2	544	141.0
34	-11.9	136	47.1	238	80.6	340	105.1	442	124.6	548	141.6
36	-10.1	138	47.9	240	81.1	342	105.4	444	124.9	552	142.1
38	-8.3	140	48.7	242	81.6	344	105.8	446	125.3	556	142.7
40	-6.5	142	49.5	244	82.2	346	106.3	448	125.6	560	143.3
42	-4.5	144	50.3	246	82.7	348	106.6	450	126.0	564	143.9
44	-3.2	146	51.1	248	83.3	350	107.1	452	126.3	568	144.5
46	-1.6	148	51.8	250	83.8	352	107.5	454	126.6	572	145.0
48	0.0	150	52.5	252	84.3	354	107.9	456	127.0	576	145.6
50	1.5	152	53.3	254	84.8	356	108.3	458	127.3	580	146.2
52	3.0	154	54.0	256	85.4	358	108.8	460	127.7	584	146.7
54	4.5	156	54.8	258	85.9	360	109.2	462	128.0	588	147.3
56	5.9	158	55.5	260	86.4	362	109.6	464	128.3	592	147.9
58	7.3	160	56.2	262	86.9	364	110.0	466	128.7	596	148.4
60	8.6	162	57.0	264	87.4	366	110.4	468	129.0	600	149.0
62	10.0	164	57.7	266	87.9	368	110.8	470	129.3	604	149.5
64	11.3	166	58.4	268	88.4	370	111.2	472	129.7	608	150.1
66	12.6	168	59.0	270	88.9	372	111.6	474	130.0	612	150.6
68	13.8	170	59.8	272	89.4	374	112.0	476	130.3	616	151.2
70	15.1	172	60.5	274	89.9	376	112.4	478	130.7	620	151.7
72	16.3	174	61.1	276	90.4	378	112.6	480	131.0	624	152.3
74	17.5	176	61.8	278	90.9	380	113.1	482	131.3	628	152.8
76	18.7	178	62.5	280	91.4	382	113.5	484	131.6	632	153.4
78	19.8	180	63.1	282	91.9	384	113.9	486	132.0	636	153.9
80	21.0	182	63.8	284	92.4	386	114.3	488	132.3	640	154.5
82	22.1	184	64.5	286	92.8	388	114.7	490	132.6	644	155.0
84	23.2	186	65.1	288	93.3	390	115.0	492	132.9	648	155.5
86	24.3	188	65.8	290	93.8	392	115.5	494	133.3	652	156.1
88	25.4	190	66.4	292	94.3	394	115.8	496	133.6	656	156.6
90	26.4	192	67.0	294	94.8	396	116.2	498	133.9	660	157.1
92	27.4	194	67.7	296	95.2	398	116.6	500	134.0	664	157.7
94	28.5	196	68.3	298	95.7	400	117.0	502	134.5	668	158.2
96	29.5	198	68.9	300	96.2	402	117.3	504	134.8	672	158.7
98	30.5	200	69.5	302	96.6	404	117.7	506	135.2	676	159.2
100	31.2	202	70.1	304	97.1	406	118.1	508	135.5	680	159.8
102	32.2	204	70.7	306	97.5	408	118.5	510	135.8	684	160.3
104	33.2	206	71.4	308	98.0	410	118.8	512	136.1	688	160.8
106	34.1	208	72.0	310	98.4	412	119.2	514	136.4	692	161.3
108	35.1	210	72.6	312	98.9	414	119.6	516	136.7	696	161.8
110	35.5	212	73.2	314	99.3	416	119.9	518	137.0		
112	36.9	214	73.8	316	99.7	418	120.3	520	137.3		


* Based on ALLIED SIGNAL Data.

Required Liquid Line Temperature

LIQUID PRESSURE AT SERVICE VALVE (PSIG)	REQUIRED SUBCOOLING TEMPERATURE (°F)					
	8	10	12	14	16	18
189	58	56	54	52	50	48
195	60	58	56	54	52	50
202	62	60	58	56	54	52
208	64	62	60	58	56	54
215	66	64	62	60	58	56
222	68	66	64	62	60	58
229	70	68	66	64	62	60
236	72	70	68	66	64	62
243	74	72	70	68	66	64
251	76	74	72	70	68	66
259	78	76	74	72	70	68
266	80	78	76	74	72	70
274	82	80	78	76	74	72
283	84	82	80	78	76	74
291	86	84	82	80	78	76
299	88	86	84	82	80	78
308	90	88	86	84	82	80
317	92	90	88	86	84	82
326	94	92	90	88	86	84
335	96	94	92	90	88	86
345	98	96	94	92	90	88
354	100	98	96	94	92	90
364	102	100	98	96	94	92
374	104	102	100	98	96	94
384	106	104	102	100	98	96
395	108	106	104	102	100	98
406	110	108	106	104	102	100
416	112	110	108	106	104	102
427	114	112	110	108	106	104
439	116	114	112	110	108	106
450	118	116	114	112	110	108
462	120	118	116	114	112	110
474	122	120	118	116	114	112
486	124	122	120	118	116	114
499	126	124	122	120	118	116
511	128	126	124	122	120	118

Subcooling Charging Table

AIR CONDITIONER TROUBLESHOOTING CHART

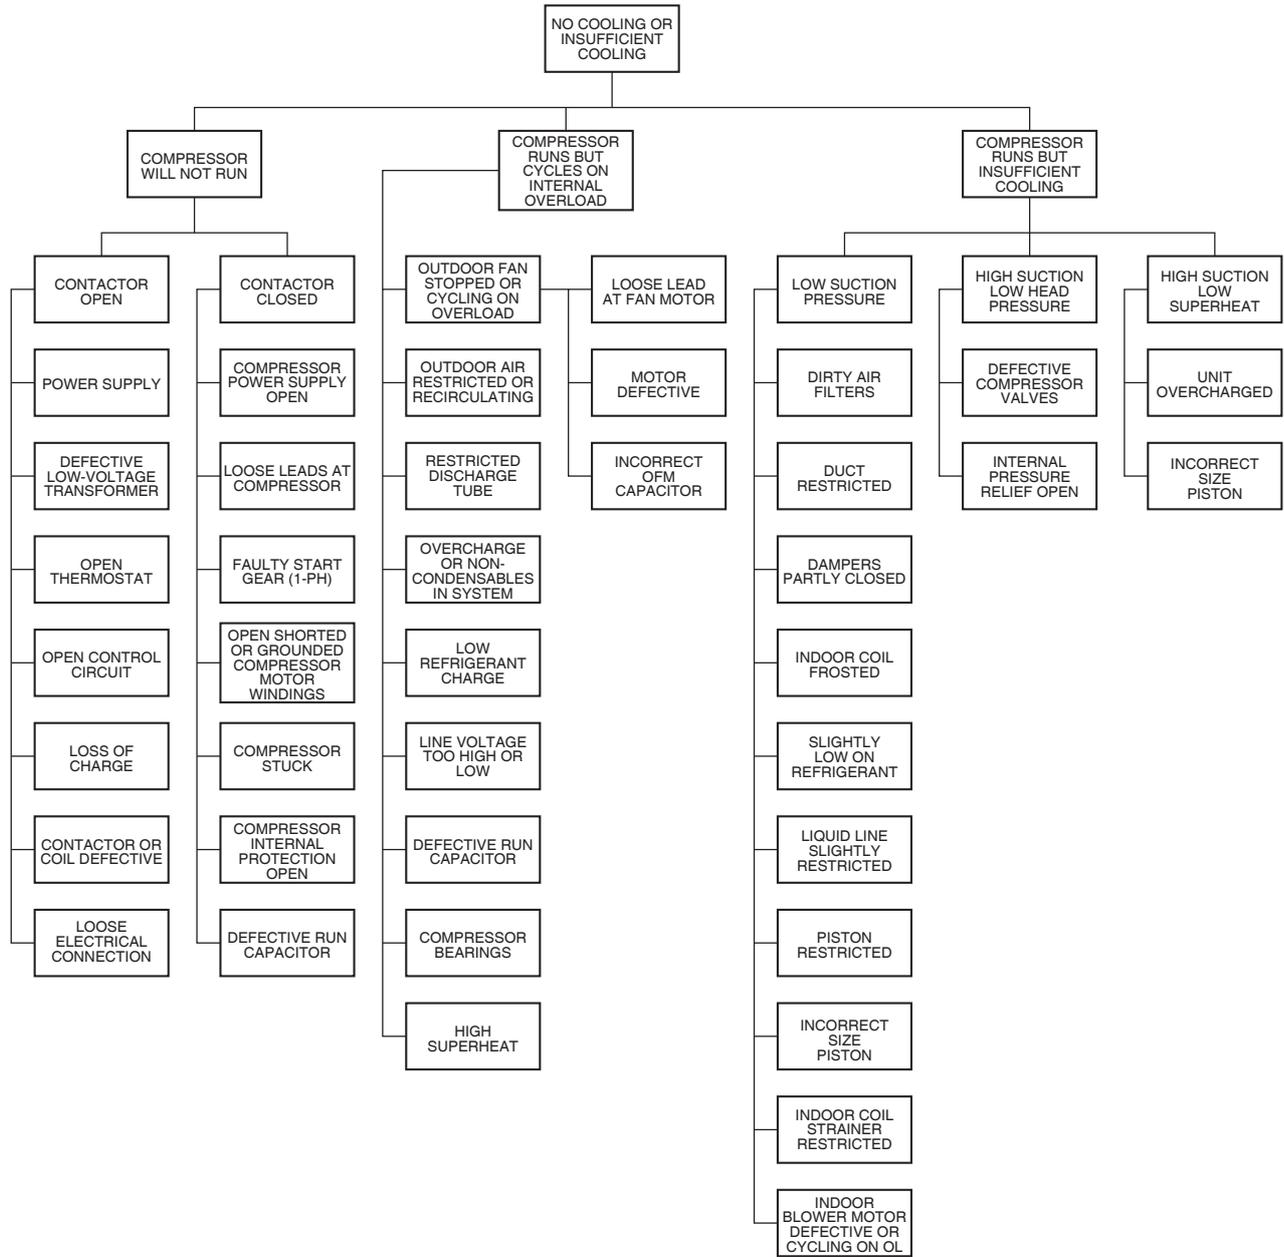

Air Conditioner Troubleshooting Chart

A90208

ATTENTION INSTALLERS AND SERVICE TECHNICIANS!

R-410A Refrigerant Quick Reference Guide

- R-410A refrigerant operates at 50-70 percent higher pressures than R-22. Be sure that servicing equipment and replacement components are designed to operate with R-410A refrigerant.
- R-410A refrigerant cylinders are rose colored.
- Recovery cylinder service pressure rating must be 400 psig, DOT 4BA400 or DOT BW400.
- R-410A refrigerant systems should be charged with liquid refrigerant. Use a commercial type metering device in the manifold hose when charging into suction line with compressor operating.
- Manifold sets should be 700 psig high side and 180 psig low side with 550 psig low-side retard.
- Use hoses with 700 psig service pressure rating.
- Leak detectors should be designed to detect HFC refrigerant.
- R-410A refrigerant, as with other HFCs, is only compatible with POE oils.
- Vacuum pumps will not remove moisture from oil.
- Do not use liquid-line filter driers with rated working pressures less than 600 psig.
- Do not leave R-410A refrigerant suction line filter driers in line longer than 72 hours.
- Do not install a suction-line filter drier in liquid-line.
- POE oils absorb moisture rapidly. Do not expose oil to atmosphere.
- POE oils may cause damage to certain plastics and roofing materials.
- Wrap all filter driers and service valves with wet cloth when brazing.
- A factory-approved liquid-line filter drier is required on every unit.
- Do NOT use an R-22 TXV.
- If indoor unit is equipped with an R-22 TXV, it must be changed to a hard-shutoff R-410A refrigerant TXV.
- Never open system to atmosphere while it is under a vacuum.
- When system must be opened for service, recover refrigerant, evacuate then break vacuum with dry nitrogen and replace filter driers. Evacuate to 500 microns prior to recharging.
- Do not vent R-410A refrigerant into the atmosphere.
- Do not use capillary tube coils.
- Observe all **warnings**, **cautions**, and **bold** text.
- All indoor coils must be installed with a hard-shutoff R-410A refrigerant TXV metering device.
- COMPRESSOR CRANKCASE HEATER — An electric heater which mounts to base of compressor to keep lubricant warm during off cycles. Improves compressor lubrication on restart and minimizes chance of refrigerant slugging. May or may not include a thermostat control.

MANDATORY START-UP CHECK LIST AND RECORD

IMPORTANT!

This page is a mandatory checklist & record – the check to be executed and data to be recorded for future reference incase of failure.
 A copy of this checklist data has to be submitted to carrier representative. Completion of this checklist is a must for any field claim, no field support will be provided for incomplete or blank checklists.

Preliminary Information

Outdoor Model Number:	Outdoor Serial Number:
Indoor Model Number:	Indoor Serial Number:
Startup Date:	Technician Name:
Customer Name/Address:	Project Name:
Additional Accessories:	

TEAR ALONG THE DOTTED LINE

Pre-Start-Up Checklist			Yes	No	NA
Outdoor Unit					
Is there any shipping damage?					
If the unit is damaged, Please specify where:					
Will this damage prevent the unit start-up?					
Check power supply to see if it matches the unit data plate?					
Has the ground wire been properly connected?					
Are the circuit protection matched with the unit size and installed properly?					
Are the power wire guage matched with the unit size and installed properly?					
Piping					
Are both refrigerant lines flushed / cleaned, connected to service valve sets and properly tightend?					
Are all the service valves open and backseated ?					
Are the Stem Valves Installed and snug?					
Have all the refrigerant connections and piping joints checked for leaks and vacuum test conducted to 500 micron?					
Indoor Fan Coil Unit Piping					
Check accurater device size is matched and installed in fan coil unit? (If Applicable)					
Are the refrigerant connections properly connected and have been checked for leakages?					
Is condensate line connected?					
Is the condensate line free from obstacle and drains freely?					
Controls					
Are control power lines connected to there control power terminal block?					
Are terminal snug in the housing?					
Are control power lines and control cables routed separately (Not in the same conduit and not in same multi-conductor cable)?					
Are control wires connected to the same circuit as associated refrigerant lines?					
Check to make sure the subbase mounting to wall is secure? (Don't apply excessive force to mounting screw)					
Are fresh batteries installed in the fan coil remote controller?					
Does remote controller backlight illuminate when the button is pressed?					
Fan System					
Does fan rotate freely?					
Are air filters in place and clean?					
Indoor Power Supply					
Does the power supply match the fan coil unit data plate?					
Is ground wire connected?					

Start-Up Checklist			Yes	No	NA
Check Indoor Fan Operation Under Ceiling Fan Coil Units					
Select fan mode, then initiate test sequence. Does the fan motor start at low speed , then shift to medium then to high?					
Start System Operation at the Fan Coil Unit					
Select cooling mode and adjust set point, it must be below current room temperature then observe unit operation.					
Does compressor start (After Initial Time Delay) and Run?					
Does outdoor fan run properly?					

After atleast 15 minutes of running time, record all the information below:					
Outdoor Unit			Fan Coil Unit		
Unit Amps(L1/L2/L3)			Indoor Entering Air dB(Dry Bulb) Temp		
Voltage (L1/L2/L3)			Indoor Leaving Air dB(Dry Bulb) Temp		
Vapor Line Pressure			Indoor Entering Air wB(Wet Bulb) Temp		
Vapor Line Temp			Indoor Leaving Air wB(Wet Bulb) Temp		
Liquid Line Temp			Technician Name, Signature and Date:		
Entering Outdoor Air Temp					
Leaving Outdoor Air Temp					

Residential Piping and Long Ling Guideline

Table of Contents

Safety Considerations	22
Introduction	23
General Limitations	24
Metering Device – Long Line Cooling	24
Interconnecting Tubing and Fitting Losses	25
Heat Pump Piston Sizing	25
Liquid Line Solenoid – Long Line Heat Pump Heating	26
Charging Information	26
Vapor Line Sizing & Cooling Capacity Loss	26
Applications	27
Units on Equal Level.....	27
Indoor Unit Above Outdoor Unit.....	28
Outdoor Unit Above Indoor Unit.....	29

Safety Considerations

Only trained service technicians familiar with standard service instructions and training materials should attempt installation, service, and repair of these units. Improper installation, adjustment, alteration, service, maintenance, or use can cause explosion, fire, electrical shock, or other conditions which may cause death, personal injury, or property damage. Consult a qualified installer, service agency, or your distributor or branch for information or assistance. The qualified installer or agency must use factory- authorized kits or accessories when modifying this product. Refer to the individual instructions packaged with the kits or accessories when installing.

Follow all safety codes. Wear safety glasses, protective clothing, and work gloves. Use quenching cloth for brazing operations. Have fire extinguisher available. Read these instructions thoroughly and follow all warnings or cautions included in literature and attached to the unit. Consult local building codes and National Electrical Code (NEC) for special requirements.

Recognize safety information. This is the safety- alert symbol . When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury. Understand these signal words; DANGER, WARNING, and CAUTION. These words are used with the safety- alert symbol. DANGER identifies the most serious hazards which will result in severe personal injury or death. WARNING signifies hazards which could result in personal injury or death. CAUTION is used to identify unsafe practices which may result in minor personal injury or product and property damage. NOTE is used to highlight suggestions which will result in enhanced installation, reliability, or operation.

Refrigeration systems contain refrigerant under pressure. Extreme caution should be observed when handling refrigerants. Wear safety glasses and gloves to prevent personal injury. During normal system operations, some components are hot and can cause burns. Rotating fan blades can cause personal injury. Appropriate safety considerations are posted throughout this manual where potentially dangerous techniques are addressed.



WARNING

ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury or death.

All equipment should be installed in accordance with accepted practices and unit Installation Instructions, and in compliance with all national and local codes. Power should be turned off when servicing or repairing electrical components. Extreme caution should be observed when troubleshooting electrical components with power on. Observe all warning notices posted on equipment and in instructions or manuals.



WARNING

EXPLOSION AND PERSONAL SAFETY HAZARD

Failure to follow this warning could result in personal injury, equipment damage or improper operation.

Refrigeration systems contain refrigerant under pressure. Puron® refrigerant (R- 410A) systems operate at higher pressure than standard R- 22 systems. Use only service equipment and components rated for Puron® refrigerant. Extreme caution should be observed when handling refrigerants. Wear safety glasses and gloves to prevent personal injury. During normal system operations, some components are hot and can cause burns. Rotating fan blades can cause personal injury. Appropriate safety considerations are posted throughout this manual where potentially dangerous techniques are addressed.

Introduction

An application is considered Long Line, when the refrigerant level in the system requires the use of accessories to maintain acceptable refrigerant management for systems reliability. Accessory requirements depend on the system type, and are defined in this document. Defining a system as long line depends on the liquid line diameter, indoor metering device (piston or TXV), actual length of the tubing, and vertical separation between the indoor and outdoor units.

For Air Conditioner systems, the charts below show when an application is considered Long Line:

AC with Puron® Refrigerant Long Line Description ft (m) Beyond these lengths, a TXV is required

Total Length	Outdoor Unit Above or Below Indoor Unit
TXV required beyond 80 ft. (24.4 m)	TXV required beyond 20 ft. (6.1 m)

AC with Puron® Refrigerant Long Line Description ft (m) (Beyond these lengths, long line accessories are required)

Liquid Line Size	Units On Same Level	Outdoor Below Indoor	Outdoor Above Indoor
1/4 + TXV	No accessories needed within allowed lengths		175 (53.3)
5/16 + TXV	120 (36.6)	50 (15.2) vertical or 120 (36.6) total	120 (36.6)
3/8 + TXV	80 (24.4)	20 (6.1) vertical or 80 (24.4) total	80 (24.4)

For Heat Pump systems, the chart below shows when an application is considered Long Line:

HP with Puron® Refrigerant Long Line Description ft (m) (Beyond these lengths, long line accessories are required)

Liquid Line Size	Units On Same Level	Outdoor Below Indoor	Outdoor Above Indoor
3/8 + TXV	80 (24.4)	20 (6.1) vertical or 80 (24.4) total	80 (24.4)

Long line applications are clearly defined in this Guideline, and must be treated differently from standard systems. A long line system requires special consideration for the following reasons:

- Additional refrigerant charge
- Refrigerant migration control
- Oil return concerns
- Capacity losses
- Metering device adjustments

Longer line sets require additional refrigerant charge that must be managed throughout the entire range of possible ambient conditions. Off- cycle refrigerant migration that results in excess refrigerant in the compressor at start up, or condensed liquid refrigerant in the suction line at start up must be avoided for compressor reliability. Follow all accessory requirements in this Guideline to control off- cycle refrigerant migration.

Another concern is proper line set sizing and construction to control oil return to the compressor, and minimize capacity losses. In residential applications, proper suction line sizing is critical to achieve adequate oil return, and maintain expected system performance. Oil return in heating mode is different from cooling mode thus, in some cases; heat pumps have additional line set limitations from air conditioning units. Follow all suction line sizing recommendations to ensure system performance and adequate oil return for compressor lubrication.

The third concern is refrigerant metering. Equivalent length and elevation changes affect pressure drop in refrigerant lines. These effects must be considered when sizing liquid lines and orifice- metering devices. Most current indoor products use a piston for refrigerant metering in cooling mode. Proper piston sizing is a concern where piston metering devices are used. Follow piston change recommendations in this Guideline for proper equipment operation (see Tables 7 & 10).

Testing has been done to determine limitations for the application of 1/4 and 5/16 inch liquid lines in cooling only systems. The limiting factor when sizing liquid lines is pressure drop. Equivalent length and vertical separation both contribute to the pressure drop in a liquid line. The liquid line sizing charts in this guideline specify whether the metering device is a piston or TXV.

NOTE: When an application is “Long Line”, accessory requirements differ depending on product type. Requirements are listed in the individual product-type sections.

General Limitations

Liquid Lines - AC Only

Liquid line diameters of 1/4” and 5/16” are allowed with published limitations for cooling- only system with TXV device only. Use 3/8” liquid lines for systems with piston indoor metering device. Using smaller liquid lines affects the maximum allowable equivalent length and when the application qualifies as long line. Elevation changes between the indoor and outdoor units also affect allowable equivalent lengths. (See tables 3, 5, and 8 to properly size liquid lines.)

NOTE: Using 1/4 and 5/16” liquid lines within the limits provided, result in no capacity or efficiency changes to the system.

Liquid Lines - Heat Pump

Liquid line sizing for heat pumps is currently limited to 3/8”. Contact your factory representative for alternate liquid line sizing for heat pump applications.

Suction Lines

Refer to individual Product Data Sheets for acceptable suction line diameters and related capacity effects.

Metering Device - Long Line Cooling

Fan coils using piston (or fixed orifice) metering device, the addition of a TXV is required at 80 ft. (24.4 m) total length or when the units have a vertical separation of 20 ft (6.1 m) or more. Once a TXV is added, other accessories are required as shown.

Interconnecting Tubing And Fitting Losses

Choosing the proper tubing diameters is critical for reliable long line applications. For proper suction line sizing, see suction line sizing charts in individual unit Product Data Sheets. These charts show all acceptable suction line diameters and related performance data based on total equivalent length. See Tables 3, 5, and 8 for the allowable liquid tubing diameters.

Refrigerant tubing must be measured both in terms of actual length and equivalent length. Use actual length for limitations and refrigerant charge calculation. The maximum liquid line length will vary depending on diameter and elevation change between indoor and outdoor units. Equivalent length takes into account pressure losses from both tubing length and losses due to fittings and accessories, such as elbows, liquid line solenoid and filter drier. Losses from fittings are expressed in equivalent length, meaning the length of straight tubing that would have the same pressure loss as the fitting. See Table 1 for equivalent lengths of commonly used fittings and accessories; maximum equivalent length allowed is up to 250 ft (76.2 m) See Tables 3, 5, 8, 11, 12 and 13 for maximum total equivalent length.

Calculate total equivalent length by adding linear (actual) length of the tubing required and the equivalent length of all elbows and accessories used. This data can be found in the outdoor unit Product Data.

Example: A 4- ton system using 7/8 in. diameter line set has a total tubing length of 165 ft. The tubing configuration uses four standard 90° elbows and two 90° long- radius elbows. Checking Table 1, the total equivalent length is calculated as:

$$165 \text{ ft straight tubing} + (\text{four standard } 90^\circ \text{ elbows} \times 2 \text{ ft}) + (\text{two long- radius } 90^\circ \text{ elbows} \times 1.4 \text{ ft}) = 165 \text{ ft.} + 8 \text{ ft} + 2.8 \text{ ft} = 175.8 \text{ ft total equivalent length.}$$

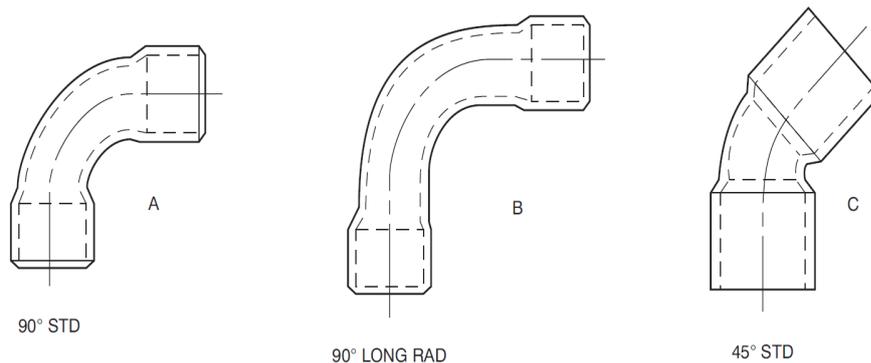


Fig. 1 – Tube Bend Losses

Table 1 – Fitting Losses in Equivalent Feet

Tube Size O.D. (In.)	Fitting - Reference Diagram in Fig. 1		
	90° Std (A)	90° Long - Rad (B)	45° Std (C)
1/2	1.2	0.8	0.6
5/8	1.6	1.0	0.8
3/4	1.8	1.2	0.9
7/8	2.0	1.4	1.0
1-1/8	2.6	1.7	1.3
Liquid Line Solenoid		12	
Filter Drier		6	

Heat Pump Piston Sizing

An AccuRater™ (fixed orifice) is used for refrigerant metering in the heating mode in heat pumps. This fixed expansion device must be changed from the factory- supplied AccuRater™ based on indoor/outdoor vertical separation and system capacity.

When sizing the heating piston for installations where the outdoor unit is below the indoor unit, use Table 7. When outdoor unit is located above indoor unit, use Table 10.

Liquid Line Solenoid — Long Line Heat Pump Heating

Since AccuRater™ do not provide off- cycle refrigerant migration protection in the heating mode, a liquid line solenoid is required for heat pump long line applications. A bi-flow solenoid valves provide flow control protection only in the direction of the arrow molded into the valve. **The arrow must point toward the outdoor** unit for off- cycle refrigerant control in the heating mode. The arrow shows the direction of flow control. The solenoid should be installed within 2 ft. (609.6 mm) of the outdoor unit. See the Product Data of individual equipment for part numbers.

NOTE: Equivalent length of the liquid line solenoid should be added to the total equivalent length of the tubing.

Charging Information

Use subcooling as the primary method for charging longline applications. Outdoor units are pre- charged for 25 ft (7.6m) of 3/8 liquid line. When using different length diameter liquid lines, charge adjustments are required. See Table 2 for charge adjustments required. The charge adjustment will depend on the liquid line diameter used. See unit installation instructions for proper charging procedure.

For all long line applications, pressure drop and subcooling loss become a concern. In these applications, a **minimum of 10°F (5.6°C) of subcooling** is required for all liquid line diameters to ensure no refrigerant flashing occurs before the TXV metering device. Systems should be charged to 10° subcooling or the rating plate subcooling, whichever is greater. Ensure the indoor and outdoor conditions are within allowable limits to charge by subcooling - indoor between 70°F and 80°F (21.1°C and 26.7°C), outdoor between 65°F and 100°F (18.3°C and 37.8°C). If outside these limits, weight in charge.

The amount of factory- charge can be found on the unit rating plate or in the Product Data literature.

Table 2 – Refrigerant Charge Adjustments

Liquid Line Size	Puron Charge (oz/ft)
3/8	0.60 (Factory charge for lineset = 9 oz)
5/16	0.4
1/4	0.27

Units are factory- charged for 25 ft (7.6 m) of 3/8” lineset. Factory charge for 3/8 lineset is 9 oz. When using other length or diameter liquid lines, charge adjustments are required per chart above.

Charging Formula:

$[(\text{Lineset oz/ft} \times \text{total length}) - (\text{factory charge for lineset})] = \text{charge adjustment}$

Example 1: System has 25ft of line set using existing 1/4”liquid line. What charge adjustment is required?

Formula: $(.27 \text{ oz/ft} \times 25\text{ft}) - (13.5 \text{ oz}) = -6.75 \text{ oz}; (8.0 \text{ g/m} \times 7.6 \text{ m}) - (382.7 \text{ g}) = -321.9 \text{ g}$

Net result is to remove 6.75 oz of refrigerant from the system

Example 2: System has 45 ft of existing 5/16” liquid line. What is the charge adjustment?

Formula: $(.40 \text{ oz/ft.} \times 45\text{ft}) - (13.5 \text{ oz.}) = 9 \text{ oz}; (11.8 \text{ g/m} \times 13.7\text{m}) - (382.7 \text{ g}) = -221.0 \text{ g}$

Net result is to add 4.5 oz of refrigerant to the system

NOTE: Conditions must be favorable for charging by subcooling method. Indoor temperature must be 70°F to 80°F (21.1°C to 26.7°C), and outdoor temperature must be 70°F to 100°F (21.1°C to 37.8°C). If outside these conditions, adjust charge for long line sets by weigh- in method.

Vapor Line Sizing And Cooling Capacity Loss

Acceptable vapor line diameters provide adequate oil return to the compressor while avoiding excessive capacity loss. Charts with acceptable suction line diameters and capacity losses are shown in the Product Data for each individual model number. Please refer to the Product Data sheets for this information

Applications

Long Line Applications - Units on Equal Level

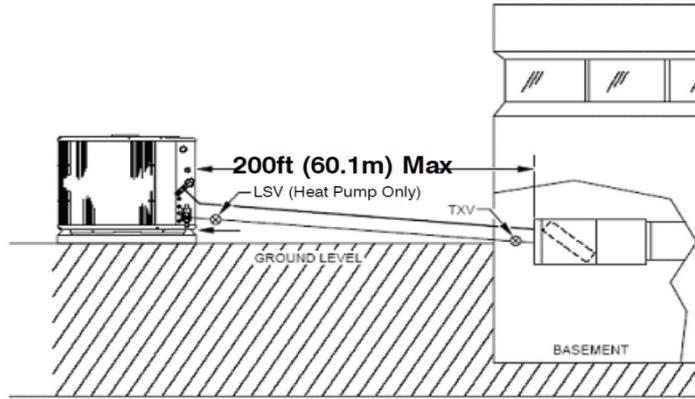


Fig. 2 – Equal- Level Outdoor/Indoor Unit

- Maximum actual length is 200 ft (60.1 m)
- Maximum equivalent length is 250 ft (76.2 m)
- A hard shut-off TXV is required on the indoor unit matched with scroll compressor outdoor, in case of reciprocating compressor applications, it's recommended to have a TXV with 15% bleed beyond 80 ft (24.4m), other accessories per lengths and heights in Table 4 below.
- A hard start kit (capacitor and relay) is required on 1- stage units
- A crankcase heater must be installed on compressor if not factory- supplied
- Vapor line should slope toward indoor unit
- Heat pump only – Bi- flow liquid line solenoid must be installed within 2 ft (0.61 m) of outdoor unit with arrow pointing towards outdoor unit.
- Heat Pump Only – no heating piston adjustment required.
- See Product Data for specific unit for accessory part numbers.

**Table 3 – Maximum Total Equivalent Length†
Units on Equal Level**

Size	System Type	Liquid Line Diameter w/ TXV	Maximum Total Equivalent Length†: Outdoor unit BELOW Indoor Vertical Separation ft (m)								
			0- 5 (0- 1.5)	6- 10 (1.8- 3.0)	11- 20 (3.4- 6.1)	21- 30 (6.4- 9.1)	31- 40 (9.4- 12.2)	41- 50 (12.5- 15.2)	51- 60 (15.5- 18.3)	61- 70 (18.6- 21.3)	71- 80 (21.6- 24.4)
18000	AC Only	1/4	150	150	125	100	100	75	--	--	--
	AC Only	5/16	250*	250*	250*	250*	250*	250*	250*	225*	150
	AC/HP	3/8	250*	250*	250*	250*	250*	250*	250*	250*	250*
24000	AC Only	1/4	75	75	75	50	50	--	--	--	--
	AC Only	5/16	250*	250*	250*	250*	250*	225*	175	125	100
	AC/HP	3/8	250*	250*	250*	250*	250*	250*	250*	250*	250*
30000	AC Only	1/4	30	--	--	--	--	--	--	--	--
	AC Only	5/16	175	225*	200	175	125	100	75	--	--
	AC/HP	3/8	250*	250*	250*	250*	250*	250*	250*	250*	250*
36000	AC Only	5/16	175	150	150	100	100	100	75	--	--
	AC/HP	3/8	250*	250*	250*	250*	250*	250*	250*	250*	250*
42000	AC Only	5/16	125	100	100	75	75	50	--	--	--
	AC/HP	3/8	250*	250*	250*	250*	250*	250*	250*	250*	150
48000	AC/HP	3/8	250*	250*	250*	250*	250*	250*	230	160	--
60000	AC/HP	3/8	250*	250*	250*	225*	190	150	110	--	--

* Maximum actual length not to exceed 200 ft (61 m)

† Total equivalent length accounts for losses due to elbows or fitting.

-- = Outside acceptable range

**Table 4 – AC / HP with Puron® Refrigerant Long Line Description ft (m)
Beyond these lengths, long line accessories are required**

AC Single Stage	AC Liquid Line Size	Units On Same Level
	1/4 + TXV	No accessories needed within allowed lengths
5/16 + TXV	120 (36.6)	
3/8 + TXV	80 (24.4)	
HP Single Stage	3/8 + TXV	80 (24.4)

Long Line Applications – Outdoor Unit Below Indoor Unit

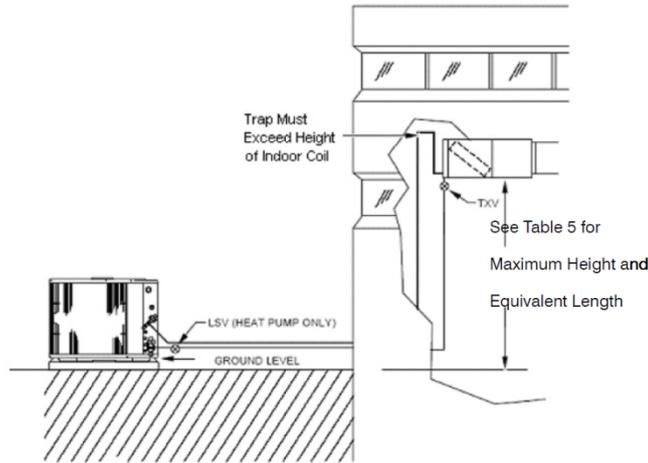


Fig. 3 – Outdoor Unit Below Indoor Unit

Maximum actual length and lift per Table 5 below

- A hard shut-off TXV is required on the indoor unit matched with scroll compressor outdoor, in case of reciprocating compressor applications, it's recommended to have a TXV with 15% bleed beyond 80ft (24.4 m) total length or 20ft (6.1m) vertical separation, other accessories per lengths and heights in Table 6 below.
- A hard start kit (capacitor and relay) is required on 1- stage units
- A crankcase heater must be installed on compressor if not factory- supplied
- Heat pump only – Bi- flow liquid line solenoid must be installed within 2 ft (0.61 m) of outdoor unit with arrow pointing towards outdoor unit.
- Heat Pump Only – outdoor piston adjustment required per Table 7 below
- An inverted vapor- line trap must be installed at indoor unit. The top peak of trap must be greater than height of indoor coil.
- Unit must be charged to 10 deg subcooling or nameplate subcooling, whichever is greater.
- See Product Data for specific unit for accessory part numbers.

**Table 5 – Maximum Total Equivalent Length†
Outdoor Unit Below Indoor Unit**

Size	System Type	Liquid Line Diameter w/ TXV	Maximum Total Equivalent Length†: Outdoor unit BELOW Indoor Vertical Separation ft (m)								
			0- 5 (0- 1.5)	6- 10 (1.8- 3.0)	11- 20 (3.4- 6.1)	21- 30 (6.4- 9.1)	31- 40 (9.4- 12.2)	41- 50 (12.5- 15.2)	51- 60 (15.5- 18.3)	61- 70 (18.6- 21.3)	71- 80 (21.6- 24.4)
18000	AC Only	1/4	150	150	125	100	100	75	--	--	--
	AC Only	5/16	250*	250*	250*	250*	250*	250*	250*	225*	150
	AC/HP	3/8	250*	250*	250*	250*	250*	250*	250*	250*	250*
24000	AC Only	1/4	75	75	75	50	50	--	--	--	--
	AC Only	5/16	250*	250*	250*	250*	250*	225*	175	125	100
	AC/HP	3/8	250*	250*	250*	250*	250*	250*	250*	250*	250*
30000	AC Only	1/4	30	--	--	--	--	--	--	--	--
	AC Only	5/16	175	225*	200	175	125	100	75	--	--
	AC/HP	3/8	250*	250*	250*	250*	250*	250*	250*	250*	250*
36000	AC Only	5/16	175	150	150	100	100	100	75	--	--
	AC/HP	3/8	250*	250*	250*	250*	250*	250*	250*	250*	250*
	AC Only	5/16	125	100	100	75	75	50	--	--	--
42000	AC/HP	3/8	250*	250*	250*	250*	250*	250*	250*	250*	150
	AC/HP	3/8	250*	250*	250*	250*	250*	250*	230	160	--
48000	AC/HP	3/8	250*	250*	250*	250*	250*	250*	230	160	--
60000	AC/HP	3/8	250*	250*	250*	225*	190	150	110	--	--

* Maximum actual length not to exceed 200 ft (61 m)

† Total equivalent length accounts for losses due to elbows or fitting.

-- = Outside acceptable range

**Table 6 – AC / HP with Puron® Refrigerant Long Line Description ft (m)
Beyond these lengths, long line accessories are required**

AC Single Stage	AC Liquid Line Size	Outdoor Below Indoor
		1/4 + TXV
	5/16 + TXV	50(15.2) vertical or 120 (36.6) total
	3/8 + TXV	20 (6.1) vertical or 80 (24.4) total
HP Single Stage	3/8 + TXV	20 (6.1) vertical or 80 (24.4) total

Table 7 – Puron® Refrigerant Heat Pump Outdoor Piston Change – Outdoor Unit BELOW Indoor Unit

Btuh	Vertical Separation ft (m) - Outdoor BELOW Indoor Unit						
	0- 19 (0- 5.8)	20- 29 (6.1- 8.8)	30- 39 (9.1- 11.9)	40- 49 (12.2- 14.9)	50- 59 (15.2- 18.0)	60- 69 (18.3- 21.0)	70- 80 (21.3- 24.4)
18,000	0	- 1	- 1	- 2	- 2	- 2	- 2
24,000	0	- 1	- 1	- 2	- 2	- 3	- 3
30,000	0	- 1	- 1	- 2	- 2	- 3	- 3
36,000	0	- 1	- 2	- 2	- 2	- 3	- 3
42,000	0	- 1	- 2	- 2	- 3	- 3	- 4
48,000	0	- 1	- 2	- 2	- 3	- 3	—
60,000	0	- 1	- 2	- 3	- 3	—	—

NOTE: (—) Indicates vertical separation exceeds allowable limits.

Example 1: On a 4 ton system the outdoor unit is 60 ft (18.3 m) below the indoor unit. This is acceptable only if the total equivalent length is 230 ft (70.1 m) or less. The heating piston must be resized - 3.

Example 2: On a 3- ton system the outdoor unit is 80 ft (24.4 m) below the indoor unit. This is acceptable up to 250 ft (76.2 m) total equivalent length. The heating piston must be resized - 3.

Long Line Applications - Outdoor Unit Above Indoor Unit

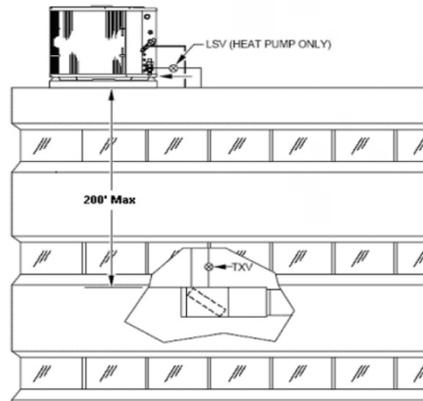


Fig. 4 – Outdoor Unit Above Indoor Unit

- Maximum lengths and separation per Table 8 below
- A hard shut-off TXV is required on the indoor unit matched with scroll compressor outdoor, in case of reciprocating compressor applications, it's recommended to have a TXV with 15% bleed beyond 80ft (24.4 m) total length or 20ft (6.1m) vertical separation, other accessories per lengths and heights in Table 9 below.
- A crankcase heater must be installed on compressor if not factory- supplied.
- Hard Start Kit (start capacitor and relay) required for 1- stage units.
- Heat pump only – Heating piston must be changed as shown in Table 10.
- Heat pump only – Bi- flow liquid line solenoid must be installed within 2 ft (0.61 m) of outdoor unit with arrow pointing towards outdoor unit.
- Vapor line traps are not required.
- See Product Data for specific unit for accessory part numbers.

Table 8 – Maximum Total Equivalent Length Outdoor Unit ABOVE Indoor Unit

Size	System Type	Liquid Line w/TXV Diameter	Vertical Separation ft (m) Outdoor unit ABOVE indoor unit							
			25 (7.6)	26- 50 (7.9- 15.2)	51- 75 (15.5- 22.9)	76- 100 (23.2- 30.5)	101- 125 (30.8- 38.1)	126- 150 (38.4- 45.7)	151- 175 (46.0- 53.3)	176- 200 (53.6- 61.0)
18000	AC Only	1/4	175	250*	250*	250*	250*	250*	250*	250*
	AC Only	5/16	250*	250*	250*	250*	250*	250*	250*	250*
	AC/HP	3/8	250*	250*	250*	250*	250*	250*	250*	250*
24000	AC Only	1/4	100	125	175	200	225*	250*	250*	250*
	AC Only	5/16	250*	250*	250*	250*	250*	250*	250*	250*
	AC/HP	3/8	250*	250*	250*	250*	250*	250*	250*	250*
30000	AC Only	1/4	30	- -	- -	- -	- -	- -	- -	- -
	AC Only	5/16	250*	250*	250*	250*	250*	250*	250*	250*
	AC/HP	3/8	250*	250*	250*	250*	250*	250*	250*	250*
36000	AC Only	5/16	225*	250*	250*	250*	250*	250*	250*	250*
	AC/HP	3/8	250*	250*	250*	250*	250*	250*	250*	250*
42000	AC Only	5/16	175	200	250*	250*	250*	250*	250*	250*
	AC/HP	3/8	250*	250*	250*	250*	250*	250*	250*	250*
48000	AC/HP	3/8	250*	250*	250*	250*	250*	250*	250*	250*
60000	AC/HP	3/8	250*	250*	250*	250*	250*	250*	250*	250*

*Maximum Actual Length Not to Exceed 200ft (61 m)

**Table 9 – AC/HP with Puron® Refrigerant Long Line Description ft (m)
Beyond these lengths, long line accessories are required**

AC Single Stage	AC Liquid Line Size		Outdoor Above Indoor	
		1/4 + TXV	175 (53.3)	
		5/16 + TXV	120 (36.6)	
		3/8 + TXV	80 (24.4)	
HP Single Stage	3/8 + TXV		80 (24.4)	

Table 10 – Heat Pump Outdoor Piston Change - Outdoor Unit ABOVE Indoor Unit

Btuh	Vertical Separation ft (m) - Outdoor Above Indoor Unit							
	20- 25 (6.1- 7.6)	26- 50 (7.9- 15.2)	51- 75 (15.5- 22.9)	76- 100 (23.2- 30.5)	101- 125 (30.8- 38.1)	126- 150 (38.4- 45.7)	151- 175 (46.0- 53.3)	176- 200 (53.6- 61.0)
18,000	+1	+1	+2	+3	+3	+4	+5	+6
24,000	+1	+1	+2	+3	+4	+5	+6	+7
30,000	+1	+2	+2	+4	+5	+6	+8	+9
36,000	+1	+2	+2	+4	+5	+6	+8	+9
42,000	+1	+2	+3	+4	+5	+7	+8	+10
48,000	+1	+2	+3	+4	+5	+7	+9	+10
60,000	+1	+2	+3	+5	+6	+8	+10	+12

**Table 11 – Scroll or Reciprocating Compressor Models
Maximum Total Equivalent Length† - Outdoor Unit BELOW Indoor Unit**

Size	Liquid Line Diameter w/ TXV	HP with Puron® Refrigerant - Maximum Total Equivalent Length† Vertical Separation ft (m) Outdoor unit BELOW indoor unit;						
		0- 20 (0 - 6.1)	21- 30 (6.4 - 9.1)	31- 40 (9.4 - 12.2)	41- 50 (12.5 - 15.2)	51- 60 (15.5 - 18.3)	61- 70 (18.6 - 21.3)	71- 80 (21.6 - 24.4)
		18000	3/8	250*	250*	250*	250*	250*
24000	3/8	250*	250*	250*	250*	250*	250*	250*
30000	3/8	250*	250*	250*	250*	250*	250*	250*
36000	3/8	250*	250*	250*	250*	250*	250*	250*
42000	3/8	250*	250*	250*	250*	250*	250*	150
48000	3/8	250*	250*	250*	250*	230	160	- -
60000	3/8	250*	225*	190	150	110	- -	- -

**Table 12 – Rotary Compressor Models
Maximum Total Equivalent Length† - Outdoor Unit BELOW Indoor Unit**

Size	Liquid Line Diameter w/ TXV	HP with Puron® Refrigerant - Maximum Total Equivalent Length† Vertical Separation ft (m) Outdoor unit BELOW indoor unit;						
		0- 20 (0 - 6.1)	21- 30 (6.4 - 9.1)	31- 40 (9.4 - 12.2)	41- 50 (12.5 - 15.2)	51- 60 (15.5 - 18.3)	61- 70 (18.6 - 21.3)	71- 80 (21.6 - 24.4)
		1- Ton	3/8	100*	100*	100*	100*	100*
2- Ton	3/8	100*	100*	100*	100*	100*	100*	100*
3- Ton	3/8	100*	100*	100*	100*	100*	100*	100*
4- Ton	3/8	100*	100*	100*	100*	100	100	- -
5- Ton	3/8	100*	100*	100*	100*	100	100	- -

* Maximum actual length not to exceed 100 ft (30.5 m)

† Total equivalent length accounts for losses due to elbows or fitting.

- - = Outside acceptable range

**Table 13 – Common AccuRater™ Piston Sizes Available through RCD
(Part numbers are all EA52PHxxx. The last 3 digits represent size)**

EA52PH032	052	070	090	113
035	055	073	093	116
037	057	076	096	120
038	059	078	098	125
040	061	080	101	128
042	063	082	104	
043	065	084	106	
046	067	086	109	
049	068	088	110	

NOTES

